


IOTA TUTORIAL 32

Restore Ledger Nano S From Recovery Phrase

MY RECOVERY PHRASE

A list of 24 words will be displayed on your device when it is initialized. Make sure to copy each word below, it is a full backup of your accounts and configuration.

- | | |
|------------|--------------|
| 1. blast | 13. genre |
| 2. derive | 14. elephant |
| 3. number | 15. dinosaur |
| 4. just | 16. roof |
| 5. topic | 17. raccoon |
| 6. write | 18. unfold |
| 7. man | 19. health |
| 8. dinner | 20. stereo |
| 9. access | 21. three |
| 10. crouch | 22. place |
| 11. staff | 23. cheap |
| 12. artic | 24. rythm |

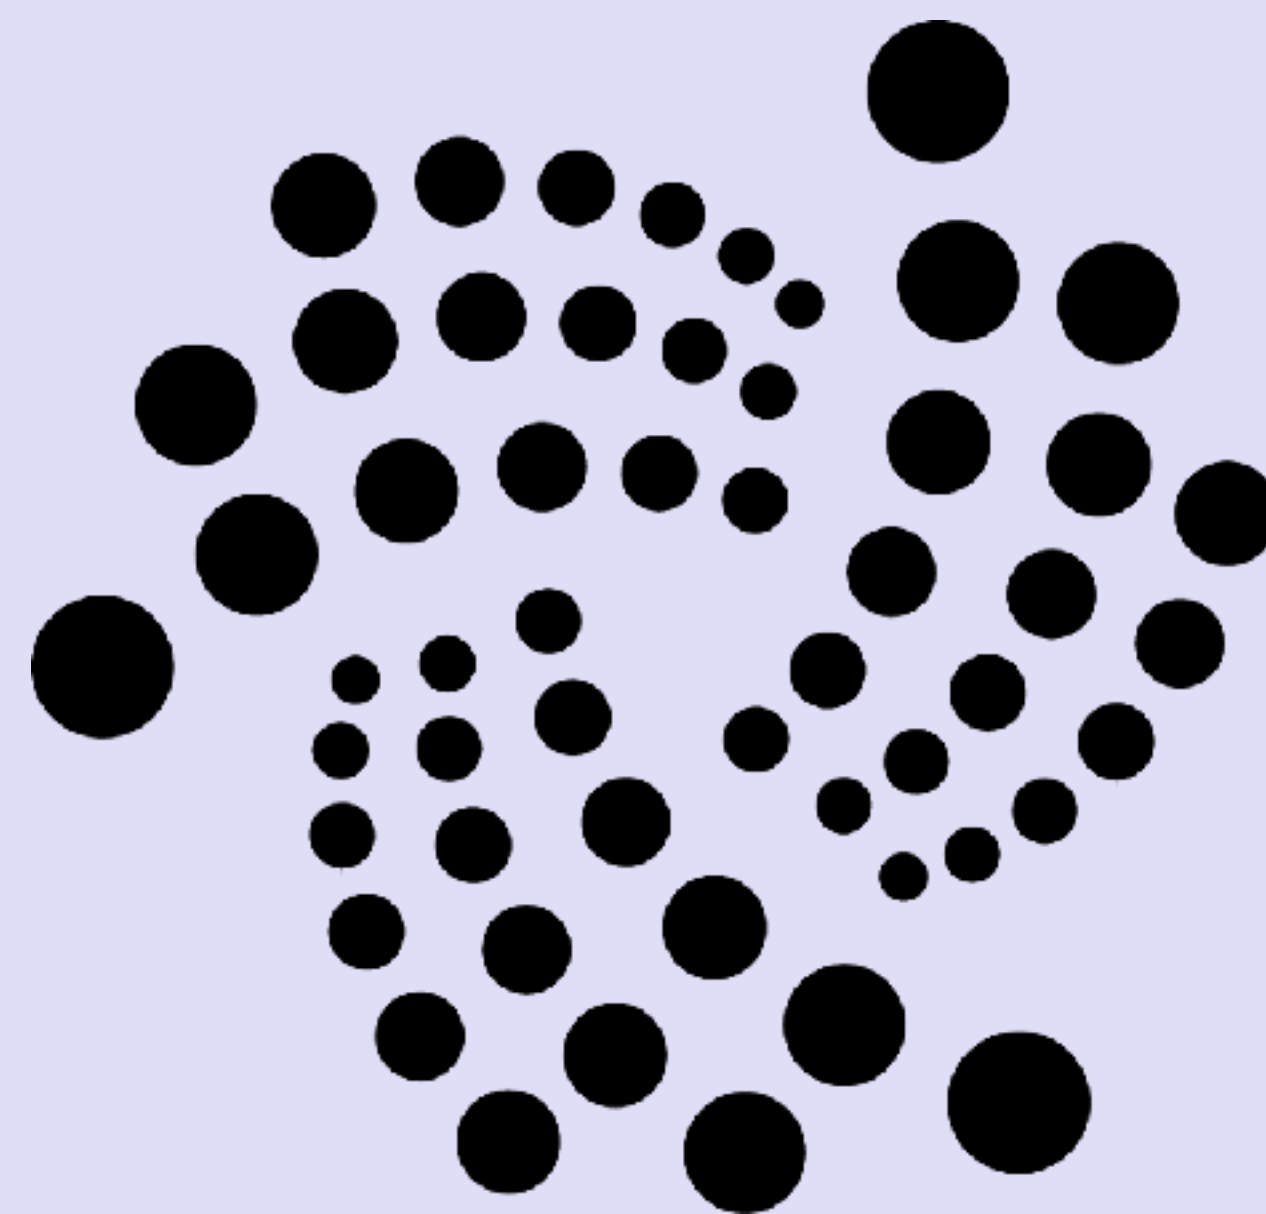

INTRO


- In this tutorial I will demonstrate how to restore the Ledger Nano S using the recovery phrase and I will demonstrate how to restore the Trinity Desktop Wallet after the wallet is reset.

CONFIDENTIAL RECOVERY SHEET

MY RECOVERY PHRASE

A list of 24 words will be displayed on your device when it is initialized. Make sure to copy each word below, it is a full backup of your accounts and configuration.

- | | |
|------------|--------------|
| 1. blast | 13. genre |
| 2. derive | 14. elephant |
| 3. number | 15. dinosaur |
| 4. just | 16. roof |
| 5. topic | 17. raccoon |
| 6. write | 18. unfold |
| 7. man | 19. health |
| 8. dinner | 20. stereo |
| 9. access | 21. three |
| 10. crouch | 22. place |
| 11. staff | 23. cheap |
| 12. artic | 24. rythm |

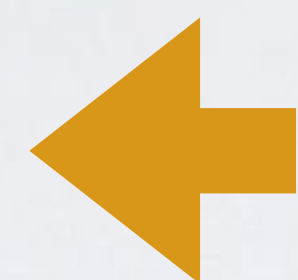

Example of a confidential recovery sheet

artic is wrong, must be **arctic**

rythm is wrong, must be **rhythm**

CONFIDENTIAL RECOVERY SHEET


- Because of these two errors I had some difficulty to restore the Ledger Nano S. The words artic and rythm were not found by the device.
- Luckily I knew that I probably made spelling mistakes. By using the BIP-39 English wordlist from <https://github.com/bitcoin/bips/blob/master/bip-0039/english.txt> I checked the correct spelling.
- Please note: I did not intentionally made this mistake! When making Tutorial 31, I checked the recovery words multiple times and I still made spelling mistakes.
- **WRITE DOWN YOUR RECOVERY WORDS CORRECTLY!
NO SPELLING MISTAKES!**

RESTORE THE LEDGER FROM RECOVERY PHRASE

1. To force the Ledger in “Restore configuration” mode, just enter the pincode 3x wrong.




2. When you see the “Welcome” screen, press BOTH buttons.

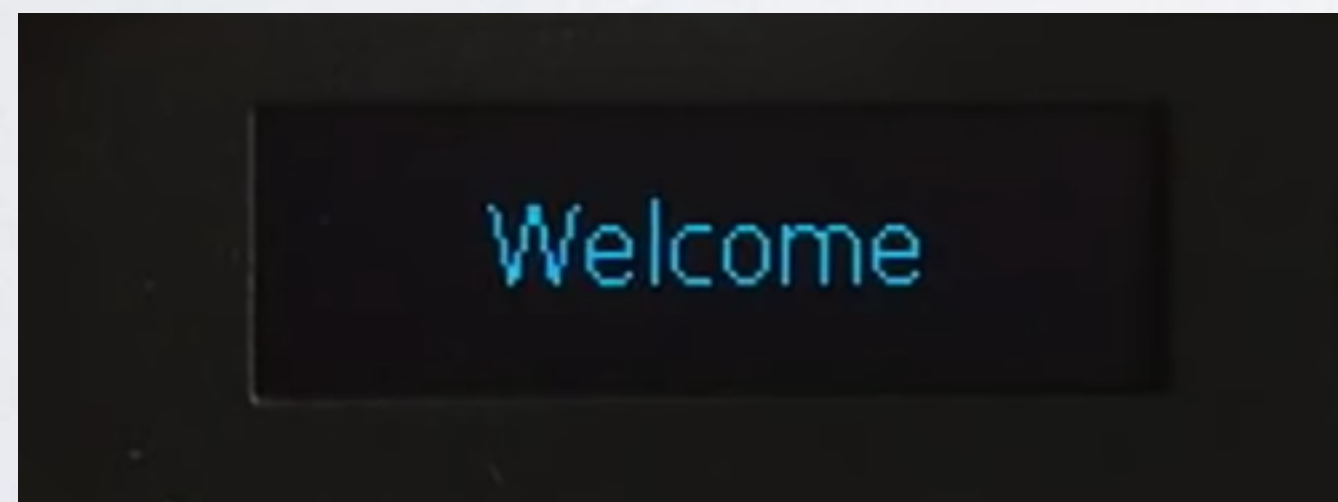

RESTORE THE LEDGER FROM RECOVERY PHRASE

3. Press LEFT button. You do NOT want to configure as new device.

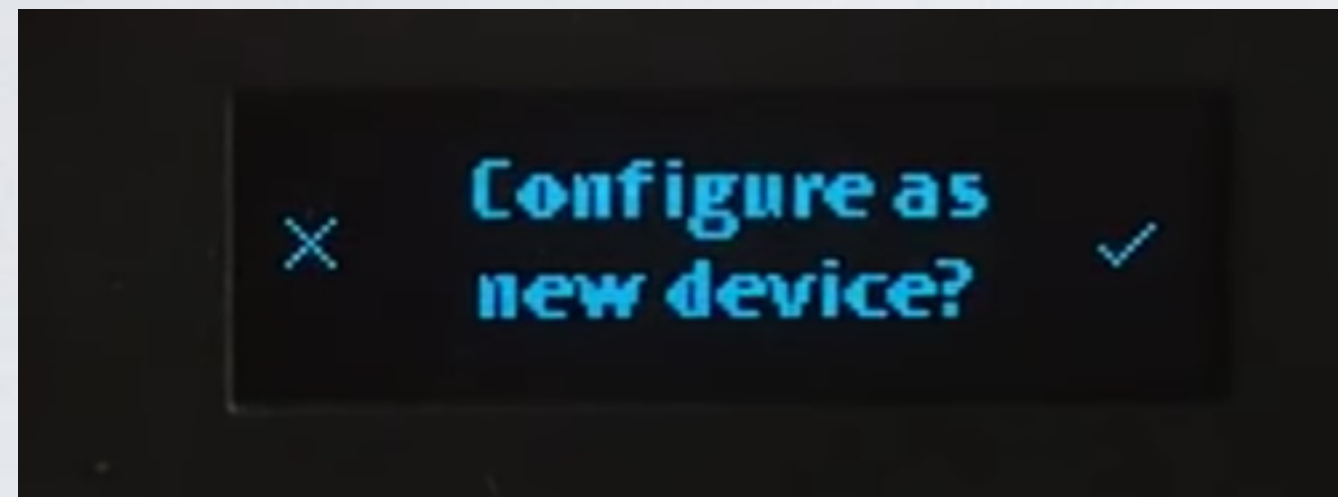

4. Press RIGHT button. You want to restore the configuration.



RESTORE THE LEDGER FROM RECOVERY PHRASE

5. Enter a pincode. You can enter a new pincode or you can use your old pincode.



6. Confirm your pincode.



RESTORE THE LEDGER FROM RECOVERY PHRASE

7. Enter your pincode again.



8. Enter **YOUR** recovery phrase using **YOUR** recovery sheet! Here is a DEMO recovery sheet which I will use.



MY RECOVERY PHRASE

A list of 24 words will be displayed on your device when it is initialized. Make sure to copy each word below, it is a full backup of your accounts and configuration.

- | | |
|------------|--------------|
| 1. blast | 13. genre |
| 2. derive | 14. elephant |
| 3. number | 15. dinosaur |
| 4. just | 16. roof |
| 5. topic | 17. raccoon |
| 6. write | 18. unfold |
| 7. man | 19. health |
| 8. dinner | 20. stereo |
| 9. access | 21. three |
| 10. crouch | 22. place |
| 11. staff | 23. cheap |
| 12. arctic | 24. rhythm |

RESTORE THE LEDGER FROM RECOVERY PHRASE

9. But first select the number of words to restore.
In the demo recovery sheet, 24 words were used.




10. Select 24 according to the demo recovery sheet.



RESTORE THE LEDGER FROM RECOVERY PHRASE

1. The first word is "BLAST" according to the demo recovery sheet.
Enter the first letter, which is B.

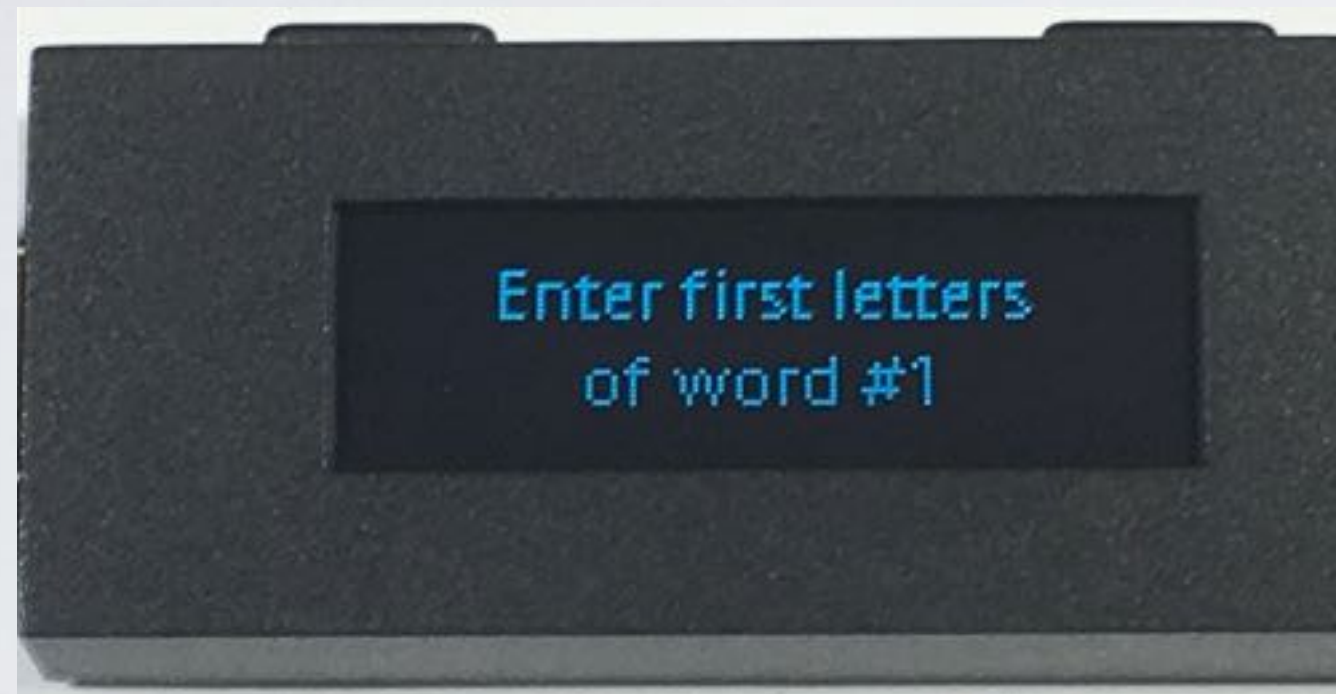

2. Select letter B.



RESTORE THE LEDGER FROM RECOVERY PHRASE

13. Select the second letter, which is L.




14. Select the third letter, which is A.

Note: You can always erase the previous letter.




RESTORE THE LEDGER FROM RECOVERY PHRASE

15. The device shows you multiple words starting with “BLA”, choose the correct one.

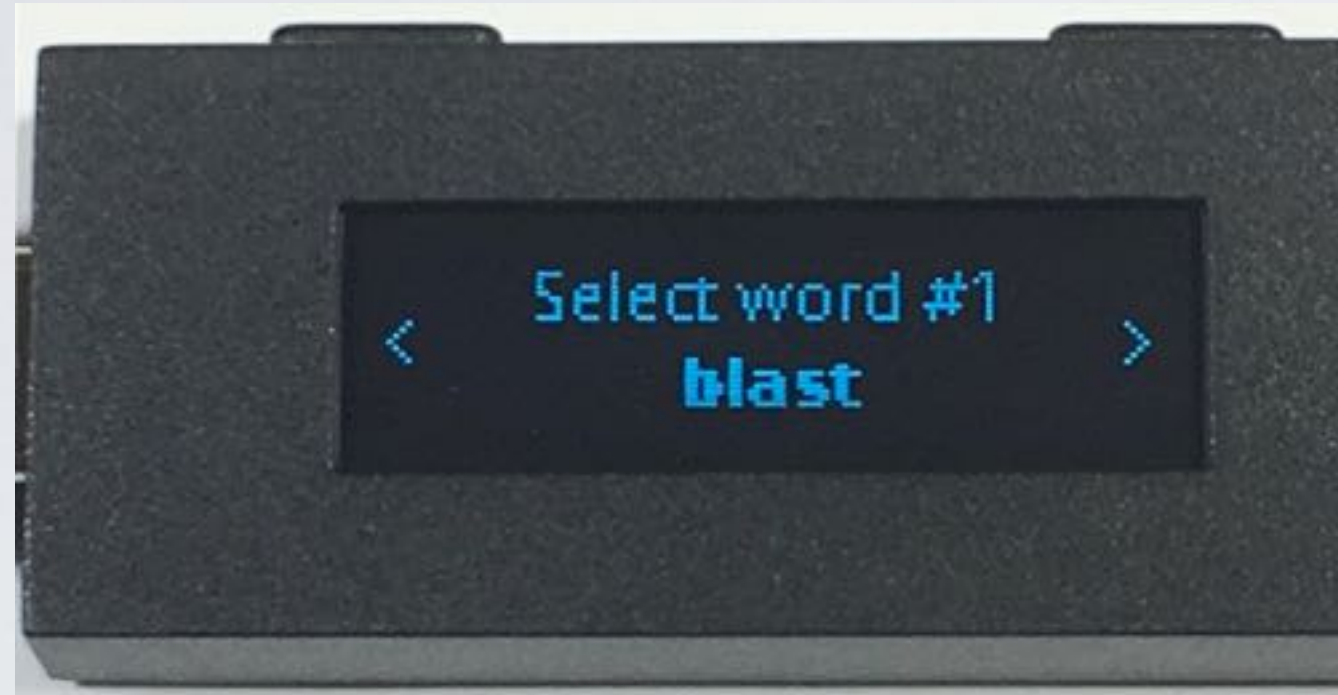


16. Note: At the end of the multiple words, you have the option to clear the word. This allows you to re-enter the word again.

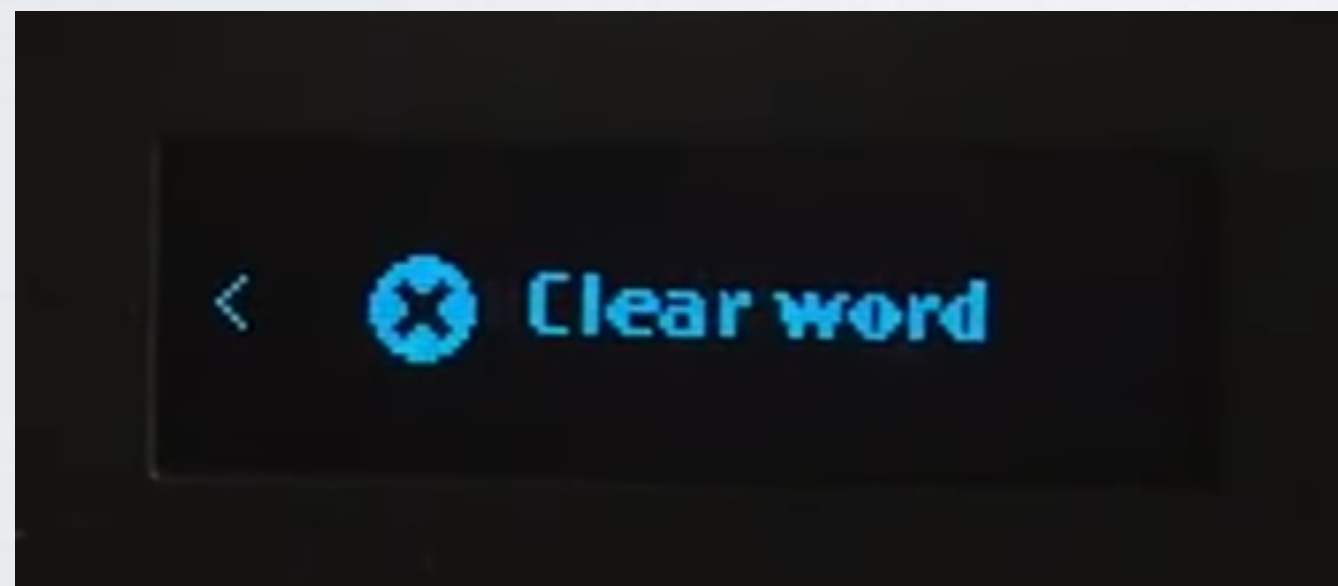


RESTORE THE LEDGER FROM RECOVERY PHRASE

17. After you selected the correct word, you can enter the letters for word #2.

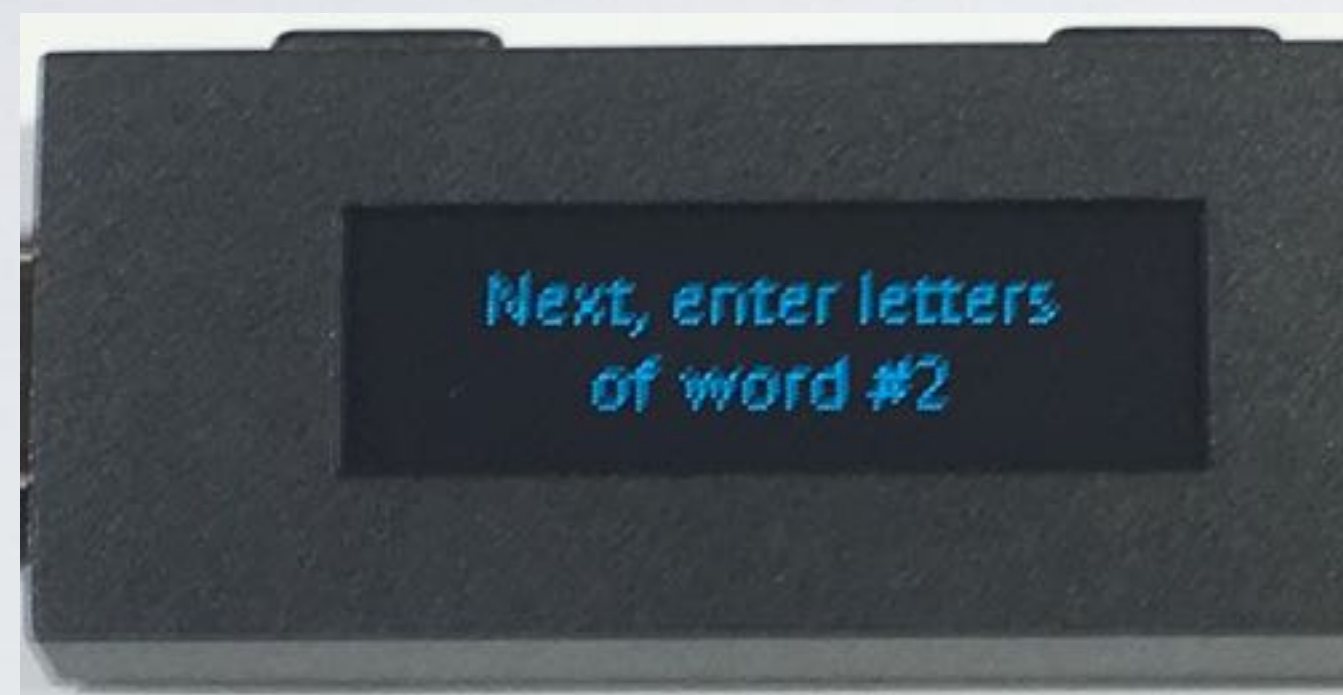


18. Repeat the steps until you have entered ALL your recovery words.
After you have selected your last recovery word, the words are being processed.

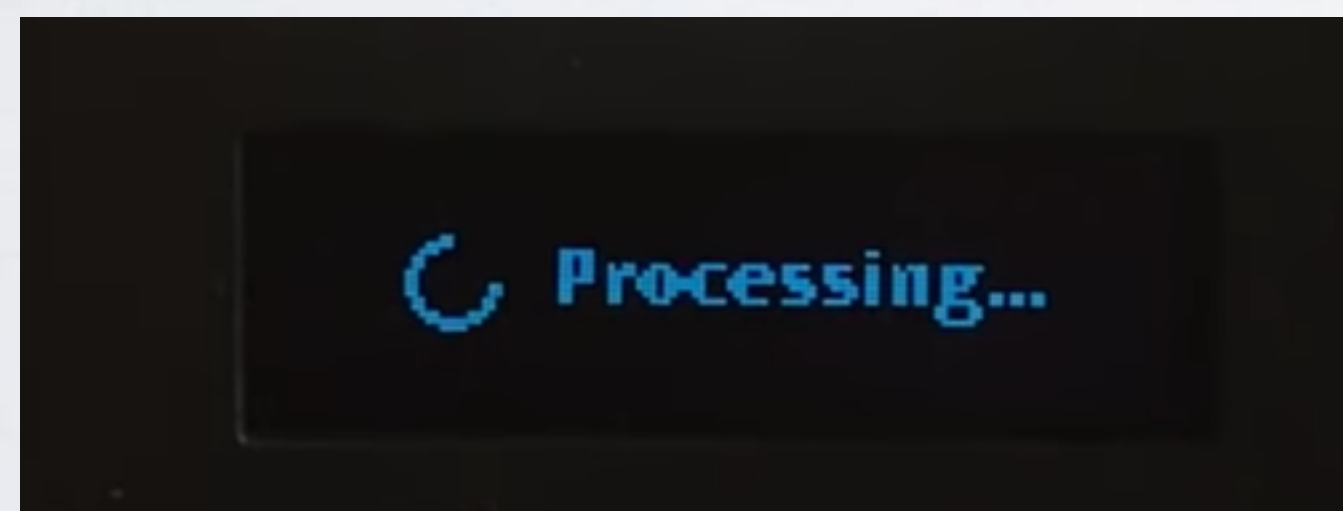


RESTORE THE LEDGER FROM RECOVERY PHRASE

19. Your device is now ready. Press BOTH buttons to continue.

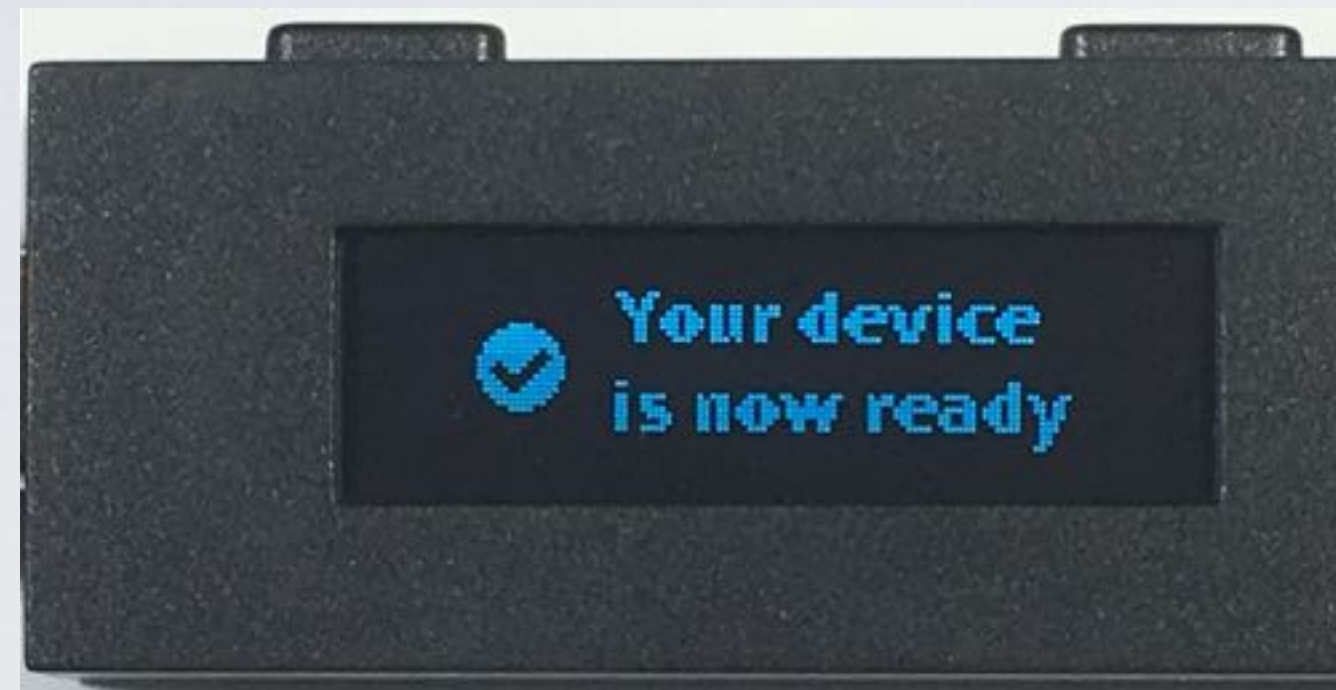

20. You will see the messages below. Press BOTH buttons to continue.


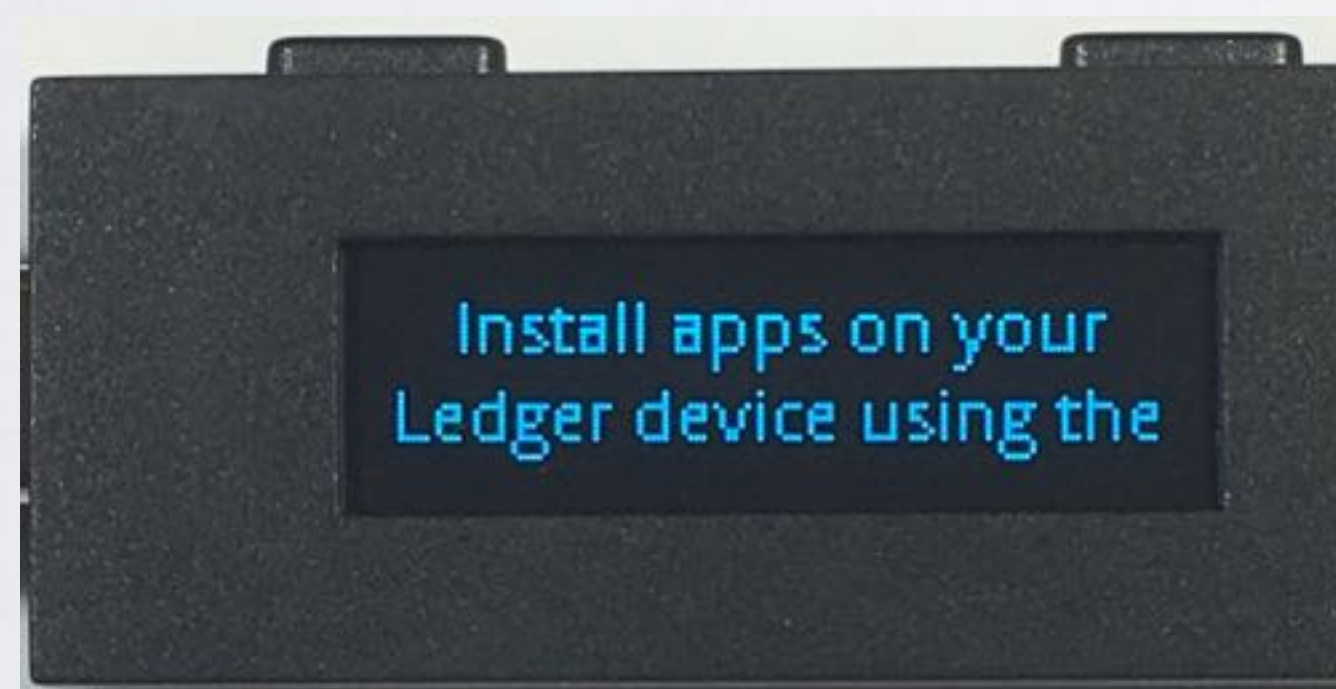


RESTORE THE LEDGER FROM RECOVERY PHRASE

21. You will see this screen. No apps are installed.



22. Start up the Ledger Live application and install the app (for example IOTA) on the Ledger device.

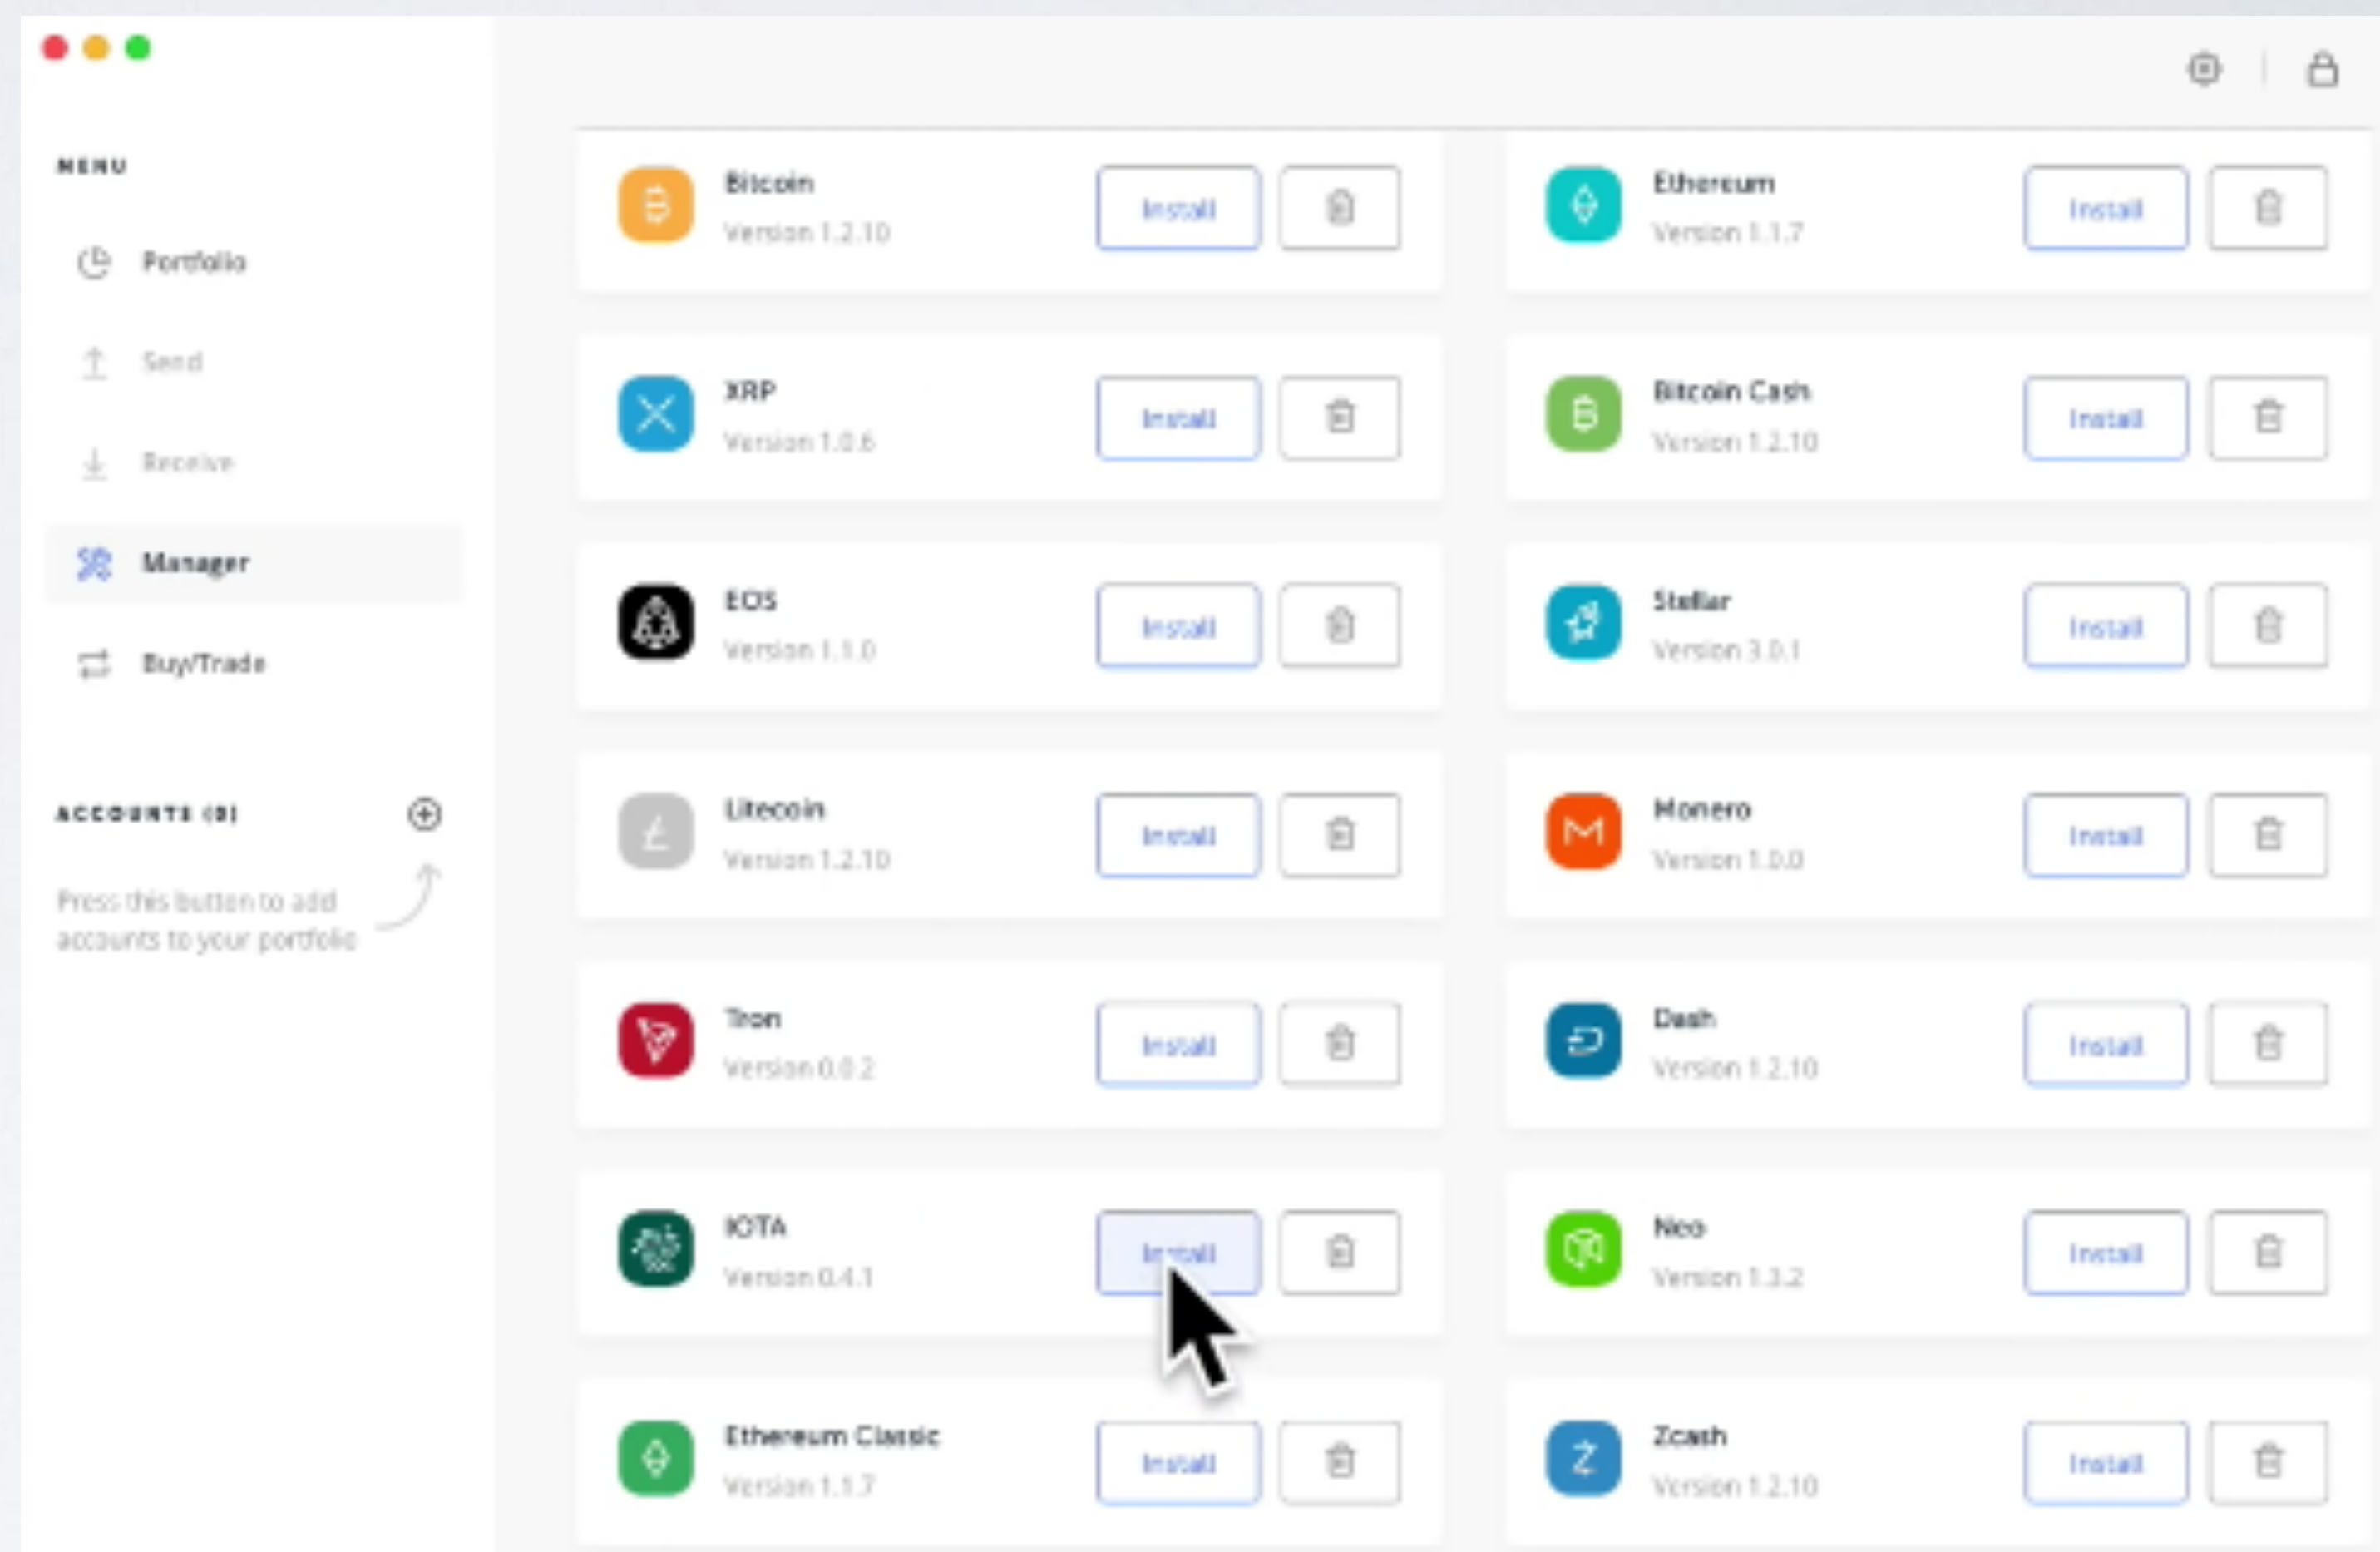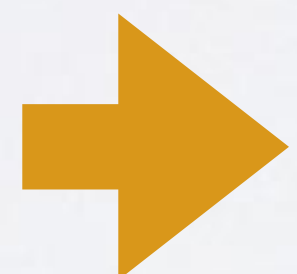


RESET TRINITY DESKTOP WALLET

- The Trinity Desktop Wallet has an option to reset the wallet.
- This option will erase all your wallet data including your seed, password, and other account information.
- This option is useful if you want send you computer to a repair shop and want to make sure all sensitive data is removed from your computer.


RESET TRINITY DESKTOP WALLET

- In wallet main screen, select Settings.

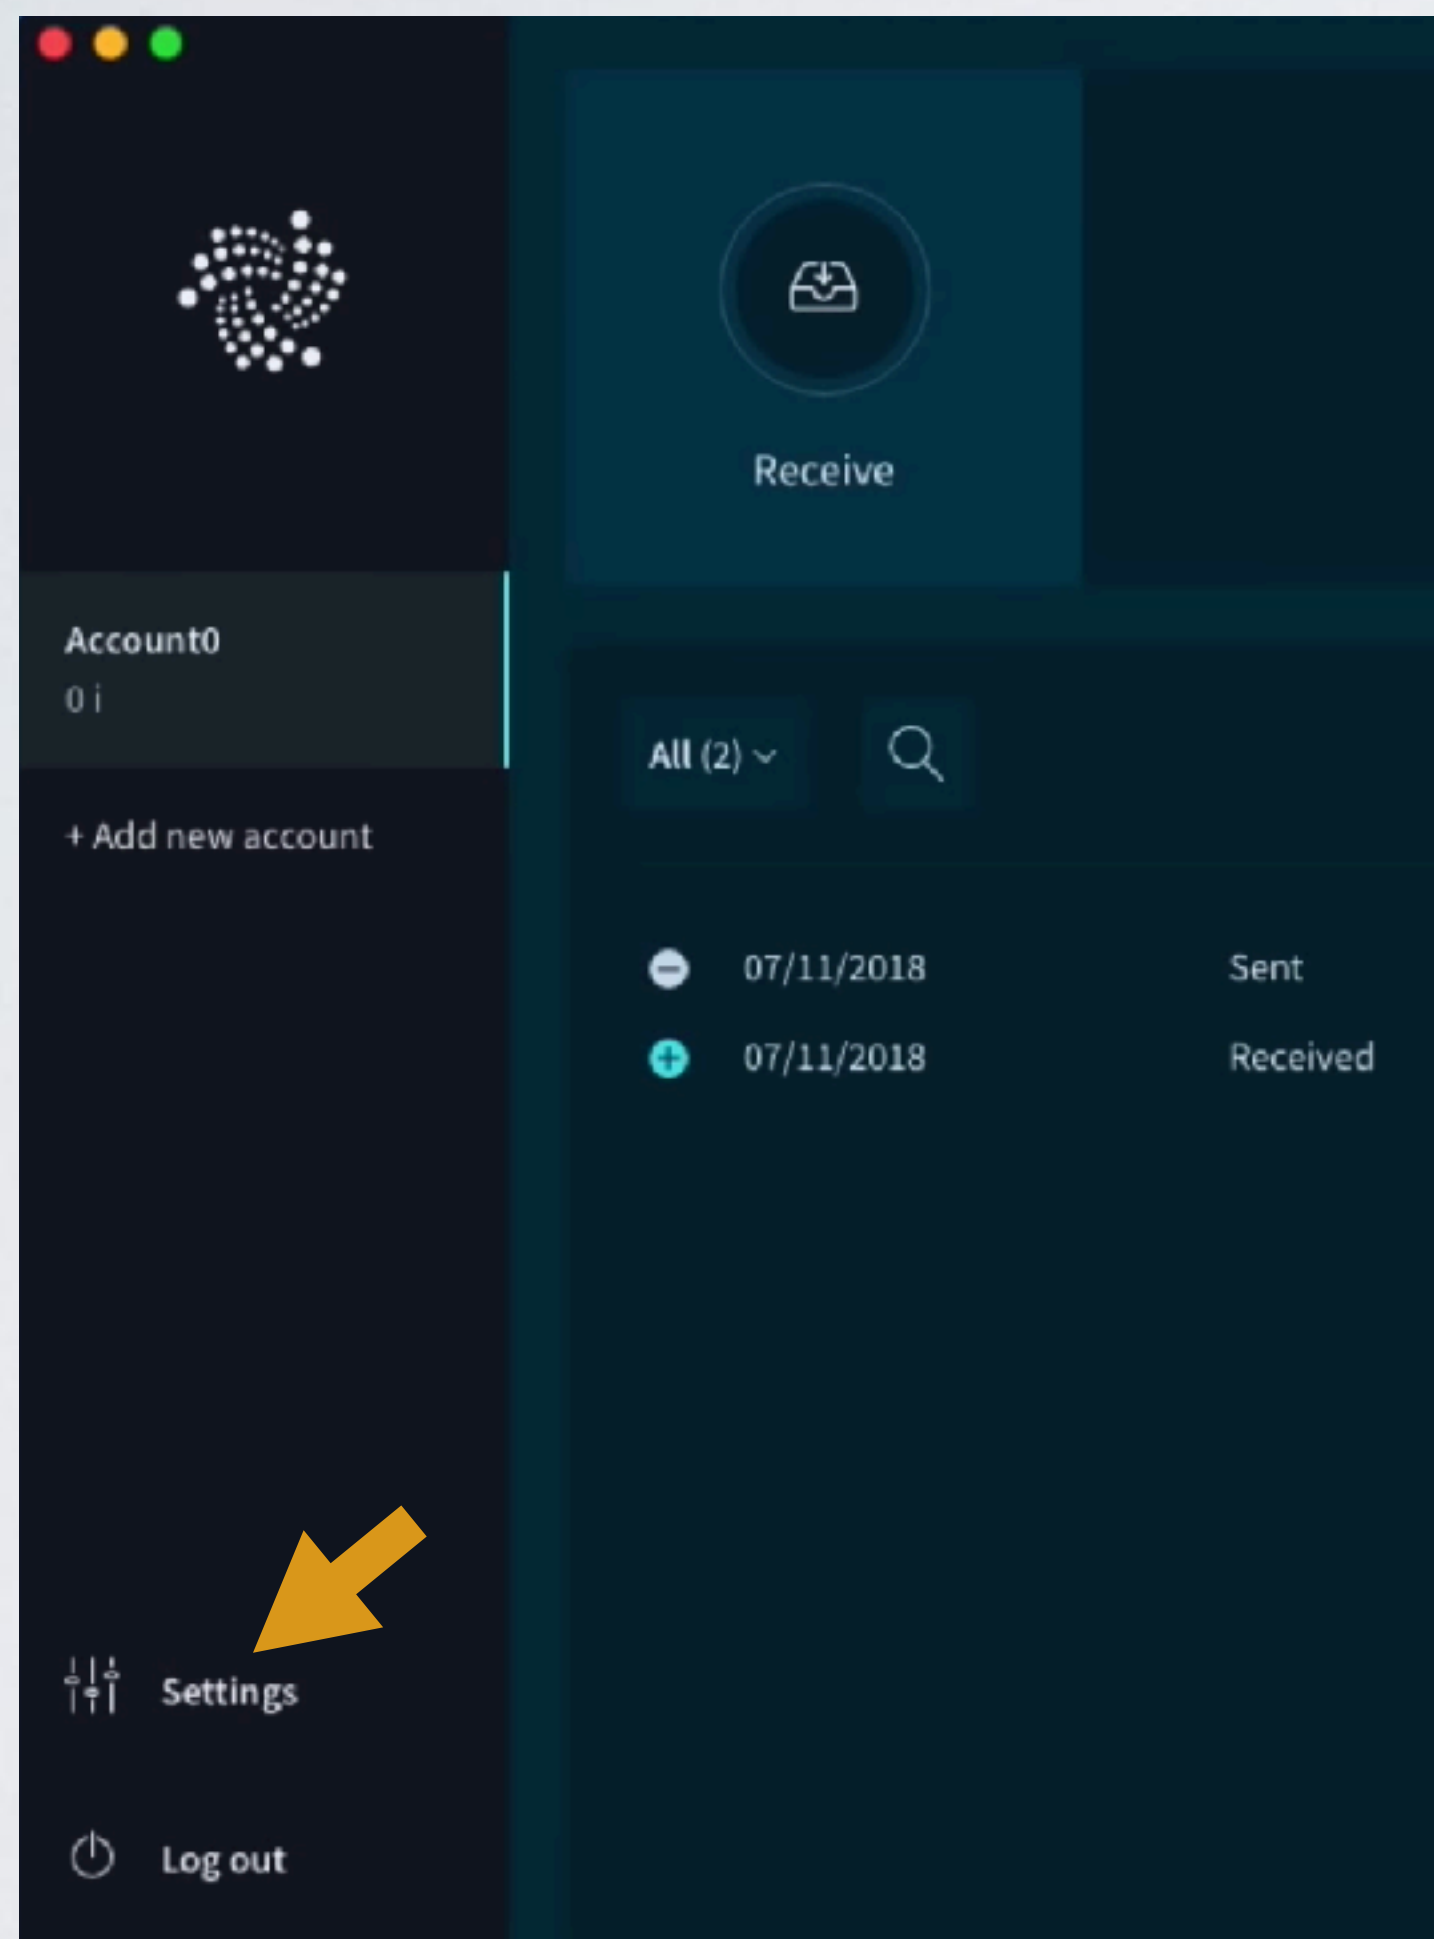

RESET TRINITY DESKTOP WALLET

- Select Advanced settings.

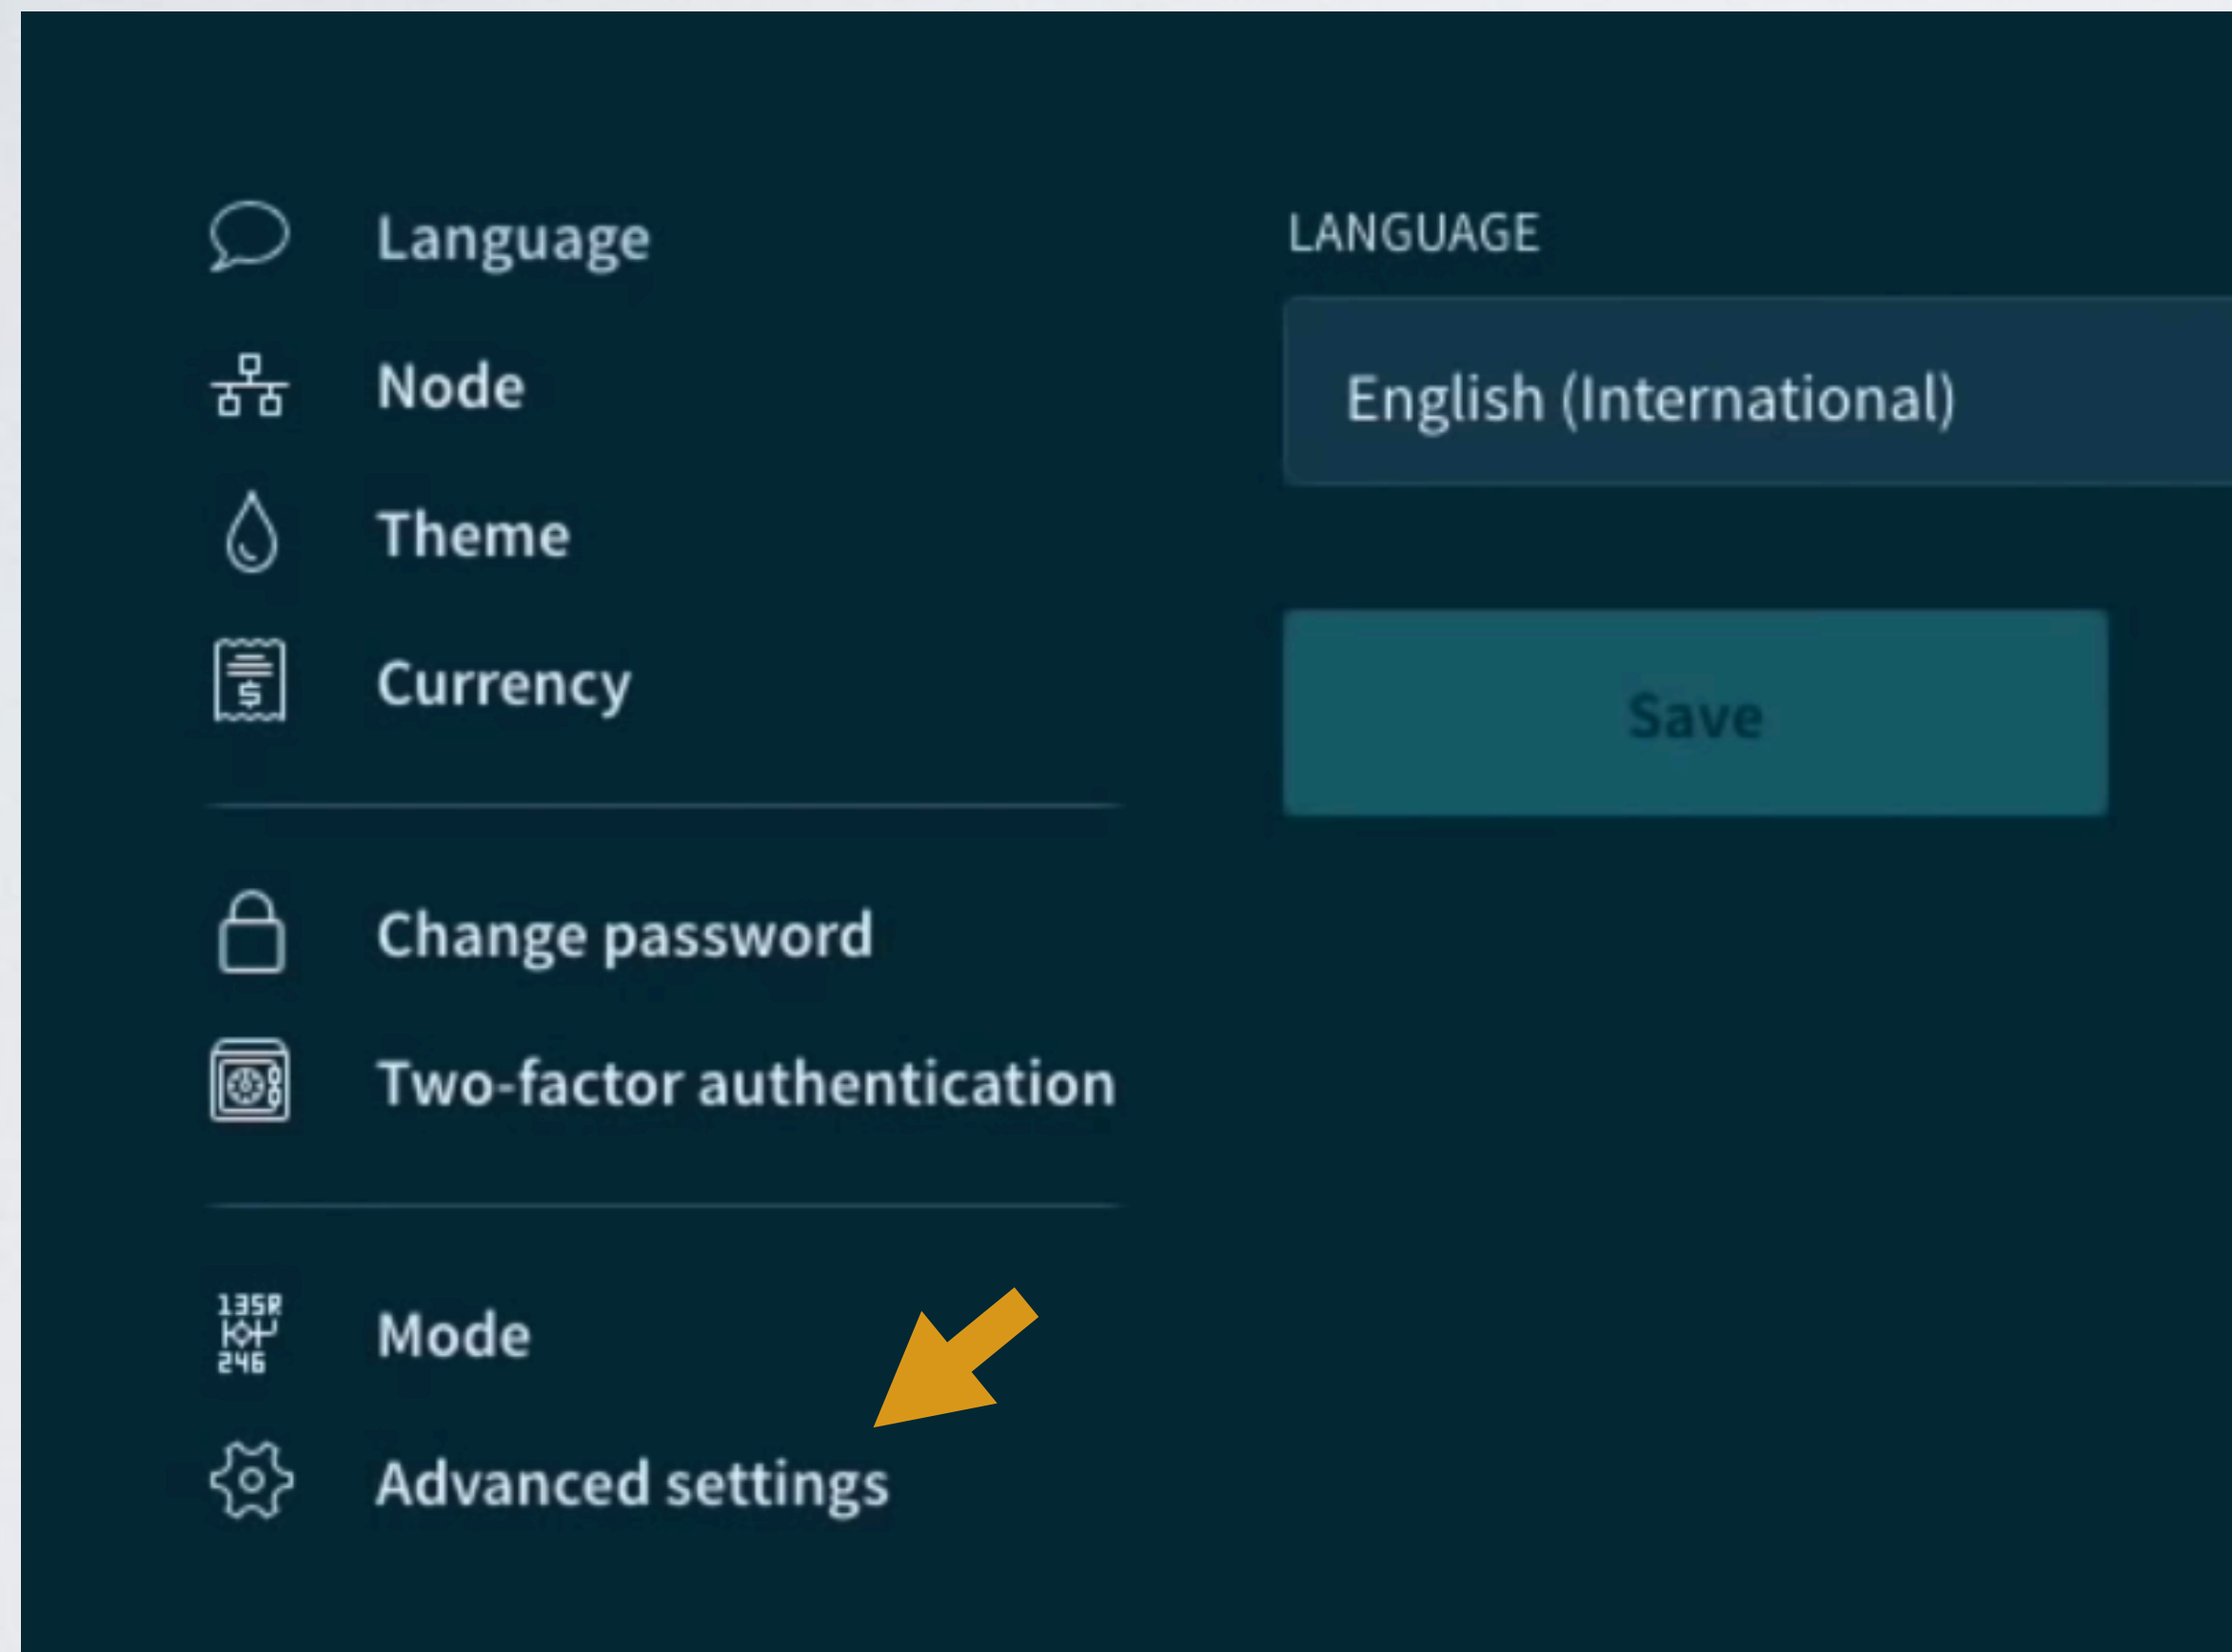

RESET TRINITY DESKTOP WALLET

- Scroll down until you see “Reset wallet”.

